



# Samsung Epix Keyboard Replacement

Step-by-step guide to replacing your old worn out keyboard buttons.

Written By: Chris



## INTRODUCTION

Step-by-step guide to replacing your old worn out keyboard buttons.

---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Press button on back of phone below camera.
- While button is depressed, remove the back panel of the phone by sliding off (not shown in picture).


## Step 2

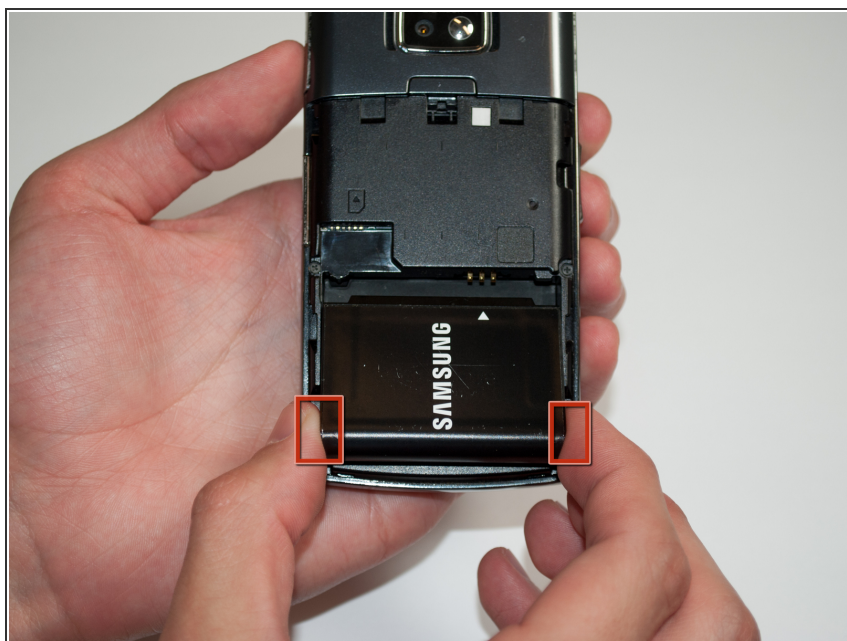

- Grasp the battery near the bottom with two fingers.
- Lift battery up and out gently.



## Step 3 — Keyboard

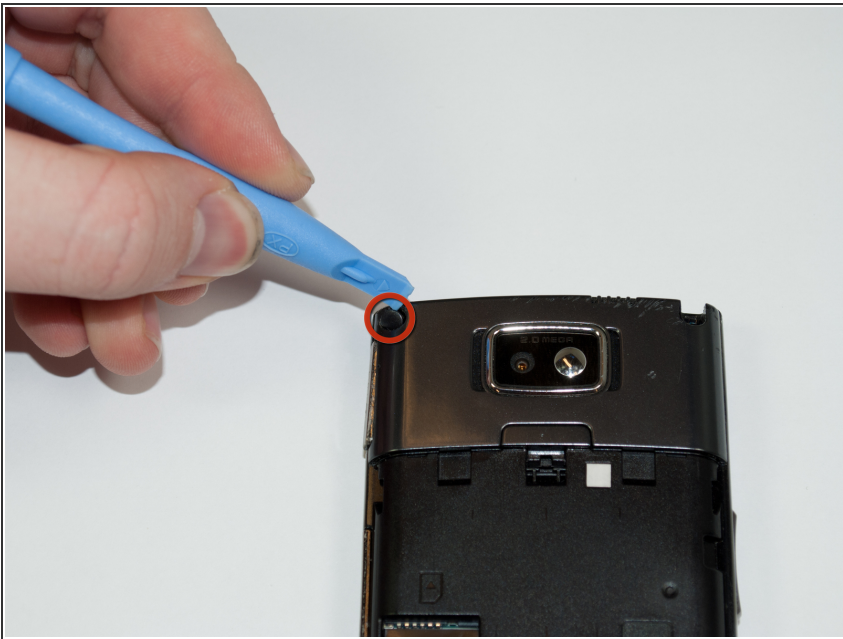

- Using an iPod opening tool, remove the screw cover in the top left corner by lifting it up.


## Step 4



- Use the Phillips #00 screwdriver to remove the six screws on the back of the phone. Three are evenly spaced on each side.
- ⓘ The upper right screw is 4.5mm while the rest are 6.5mm.



## Step 5

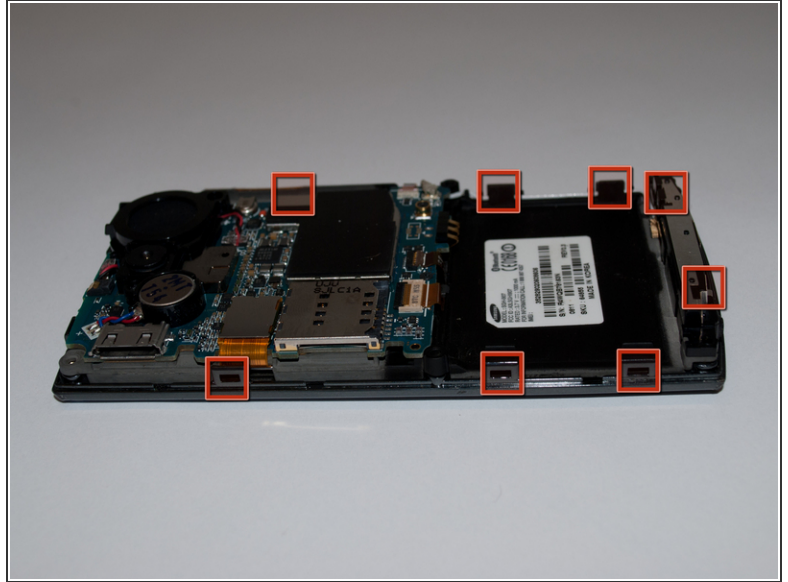

- Slide the iPod opening tool into the seam on the side of the phone and turn it slightly to unhook the eight clips.

**i** There are three clips on each side and two at the bottom of the phone.


## Step 6



- Once all eight of the clips have been unhooked, lift the back panel off of the phone.

**!** Be careful not to remove the front panel. It is still connected to the phone chassis by a ribbon cable located in the bottom right side of the motherboard.

## Step 7

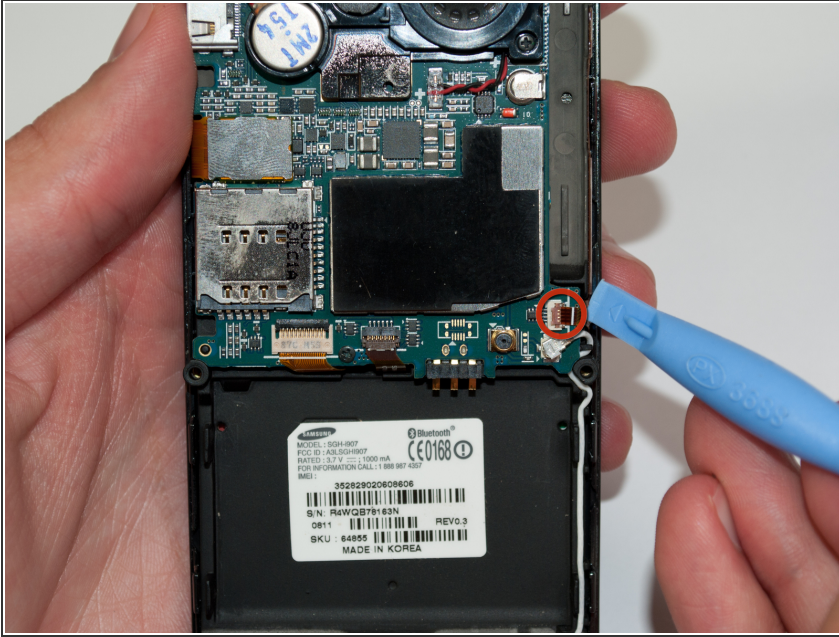

- Using an iPod opening tool, unlatch the ribbon cable located in the lower right corner of the motherboard.
- Carefully remove the ribbon.

## Step 8



- Remove the front faceplate.

## Step 9



- Grasp the rubber keyboard in the corner with your fingers and lift to remove.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 02:48:05 PM.